

Sway Bar Link Kit

Dodge Ram 2500 / 3500 | 2003-26

Part #: 122412 Rev. 010926

491 W. Garfield Ave., Coldwater, MI 49036 • Phone: 517-279-2135

Web: www.bds-suspension.com • E-mail: tech-bds@ridefox.com



SAFETY WARNING

BDS Suspension Co. recommends this system be installed by a professional technician. In addition to these instructions, professional knowledge of disassembly/ reassembly procedures and post installation checks must be known.


INSTALLATION INSTRUCTIONS

1. Park on a clean, flat surface and block the rear wheels for safety.
2. Remove upper bolt that attaches the upper clevis bracket on the sway bar to the sway bar link (Fig 1). Save hardware.



Tip The upper clevis bracket can be left on the sway bar for sway bar link replacement.

FIGURE 1

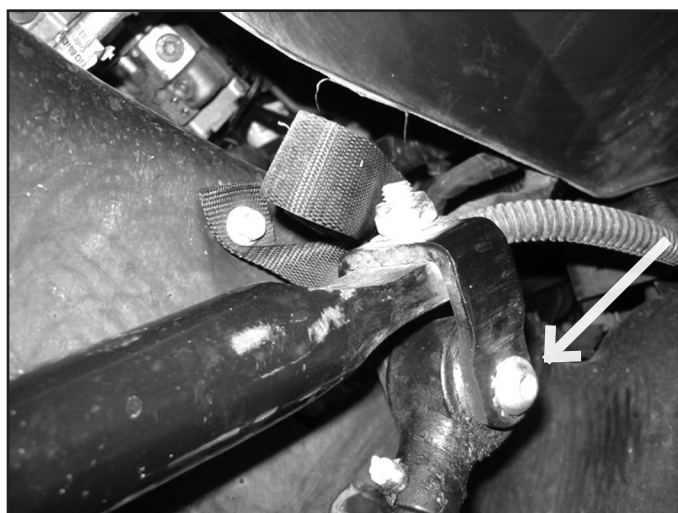


3. Remove lower bolt and offset spacer that attaches the sway bar link to the front axle housing mount (Fig 2). Save hardware.
4. Install new 03029 sleeve (short sleeve) into new upper sway bar link bushing. Center sleeve in bushing.
5. Install new 149 sleeve (long sleeve) into new lower sway bar link bushing. Center sleeve in bushing.
6. 2014-'22 model years, place the new included offset spacer on lower mounting stud between the sway bar and front axle housing mount (Fig 2). 2003-'13 models will reuse old spacer.

Kit Contents

Part #	Qty	Description
A239	2	Ram Sway Bar Link
M03212-BK-01	2	Offset Spacer
03029	2	Sleeve - Upper
149	2	Sleeve - Lower

FIGURE 2

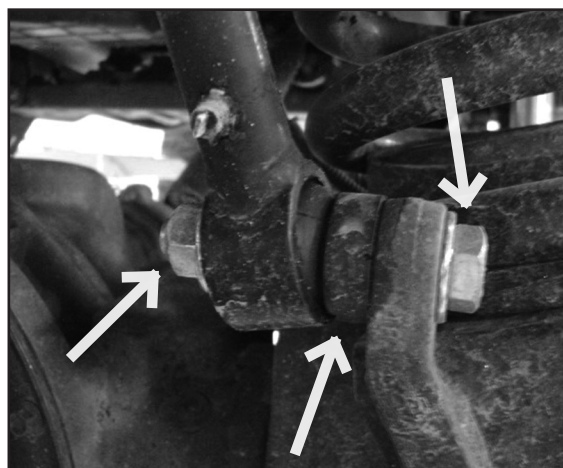

7. Install new sway bar link with grease zerks facing the front of the vehicle.
8. Non-disconnect links, torque upper 10mm button head bolt to 30 ft-lbs, lower 14mm bolt to 88 ft-lbs. Disconnect links, torque upper bolt to 45 ft-lbs and reattach lower lynch pin.
9. Grease upper and lower sway bar link bushings via grease zerks.
10. Repeat installation steps for second sway bar link, opposite side.

POST INSTALLATION / FINAL CHECK

11. Check all hardware for proper torque.
12. Check sway bar link grease fittings for proper grease application. Grease at regular maintenance intervals (3-5,000 miles).
13. Re-check hardware after 500 miles.

TIME TO HAVE SOME FUN

Thank you for choosing BDS Suspension.

For questions, technical support and warranty issues relating to this BDS Suspension product, please contact your distributor/installer before contacting BDS Suspension directly.